


Thank you for purchasing a Sunpleat™ blind,

CONTENTS:

- A - Cellular shade
- B - Mounting brackets (with several 1" screws)
- C - Bottomrail and headrail endcaps
- D - Hold down brackets (with several 3/4" screws)
- E - Lift Cord & Tassel

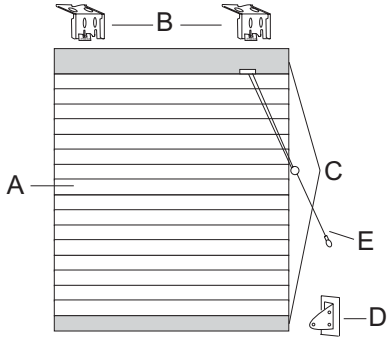

Recommended Tools :

Screwdriver, Pencil, Drill, Tape Measure, Level

WARNING :

Mounting your Sunpleat™ blind to wood, hardboard or sheet metal surfaces may require appropriate fasteners, such as anchor screws or toggle bolts, which are not included in the package.

MOUNTING BRACKETS


(NOTE: Secure mounting brackets using 1" screws)

When installing shade, brackets must be aligned and level for accurate installation. A level can be used to accurately align the brackets.

Attach mounting brackets onto the headrail by hooking the front lip of the headrail over the front edge of the mounting bracket then push the bracket downward until it snaps into position. Mounting brackets should be positioned 2" to 4" from each end of the headrail. Be sure mounting brackets do not interfere with the internal components of the cellular shade upon installation. For wider shades that require 3 or 4 brackets, center support brackets should be evenly distributed between the two outermost brackets.


For Outside Mount :

Hold shade up to window exactly as you will want it after installation and make sure the blind is level. Mark the exact position at the top of each bracket with a pencil. After making the marks, remove the brackets from the headrail and position the top of each bracket onto the wall or window recess.

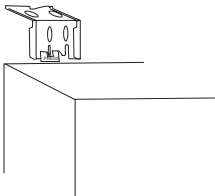

For Inside Mount :

Hold the shade up to the window exactly as you will want it after installation and make sure the blind is level. Mark the exact location at the rear of each bracket with a pencil. After making the marks, remove the brackets from the headrail and position them in alignment with the marks.

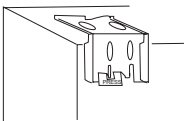

WARNING !

To avoid the risk of strangulation, it is advisable to keep all pull cords out of the reach of children. Safety measures include:

- Installation of safety devices such as clamps and cleats that reduces the accessibility of the cord.
- Move cots and furniture away from the window to avoid accessibility to the cord.



HANGING YOUR SUNPLEAT™ BLIND

Hang your Sunpleat™ blind by hooking the front lip of the head rail over the front edge of each of the aligned mounting brackets. Push the headrail upwards and back until it snaps into position with the mounting brackets.



IMPORTANT NOTICE:


Due to the nature of the package and the fabric, the cellular shade may take time to drop to its full length after initial installation. Fully open and leave your cellular shade extended for approximately 2-3 days to allow the fabric to relax.

REMOVING YOUR SUNPLEAT™ BLIND

To remove your cellular shade, press the tab at the bottom of each bracket with a screwdriver and rotate the shade forward releasing them out of each bracket.

INSTALLING HOLD DOWN BRACKETS

Screw 3/4" screws into the base of the hold down bracket; snap bracket pin ends into the hole of the bottomrail end caps.

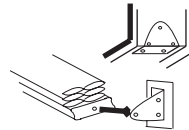

NOTE :

Due to the nature of the internal components : If the shade is closed for an extended amount of time without any activity (where the internal spring is stretched out), opening the shade (the recoil of the spring) may require adjustment to return to its normal operation and desired location. This is due to the natural elasticity in the spring components. To adjust, push and pull the shade a few times to completely open and close the shade. This will assist the spring to return to normal operation and the desired shade location. If your shade has been cut and is not operating normally please contact our customer service department immediately.

CLEANING INSTRUCTIONS

To maintain the beauty of your shade please dust using soft clean cloth or soft brush.